DPF Manual
DPV-114

INTRODUCTION

Thank you for choosing our TEXET digital picture frame (DPV-114). A mini digital photo frame is used to view personal photographs making them a perfect gift for friends and family.

SPECIFICATION

1.5 inch TFT LCD display.
Slide show or manual play.
Supports JPG/JPEG, BMP files.
Calendar, clock and alarm clock function.
PC connectivity (Compatible with all Windows and Mac PC's)
Powered supplied by rechargeable lithium batteries.

PACK CONTENTS

1 x Photo Frame
1 x User Manual
1 x USB Cable

HOW TO OPERATE YOUR DIGITAL PICTURE FRAME

There are three main operation keys:

Menu/Play "M", Up key "►" and Down key "◄" (Please note that the "Reset" key is located inside the device. It can be reset by inserting pin / pen)

Press "M" to switch the digital picture frame on/off and to access the main menu. Press "M" key and hold it for 3 seconds to view pictures. When viewing your photos you will be directed back to the main menu by pressing the "M" key. To switch it off, hold down "M" key until the devices shuts down.

MAIN MENU SET UP AND FEATURES

MAIN MENU
USB CONNECT
CLOCK
SLIDE SHOW
AUTO SHUT DOWN
BACK LIGHT
DELETE
OFF
EXIT

USB CONNECT

Select "USB CONNECT" from the Main Menu

USB CONNECT
YES
NO

Press ◄ or ► key to select "Yes" or "No". To enter PC connection select "Yes" this will enable you to update your photos through the auto-run software. Select "No" to exit.

CLOCK

Select "Menu to configure clock, alarm and calendar display.

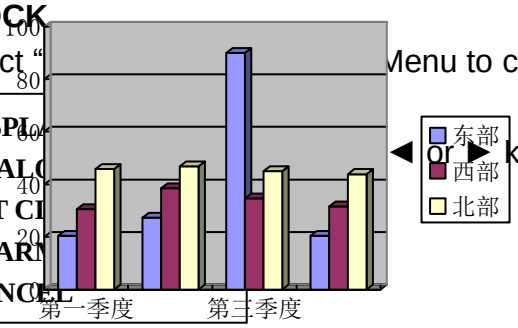

DISPL
ANALO
SET CL
ALARM
CANCEL

◄ or ► key to setup settings and "M" key to save setting and exit.

(Please note that there will be real-time update when you connect to your PC through the USB cable provided)

SLIDE SHOW

Select "SLIDE SHOW" from the Main Menu to adjust the speed that you view your pictures.

ON
OFF
CANCEL

Press ◄ or ► key to switch on slide show and setup viewing time. Select between "00-15" seconds and press "M" key to save setting and to exit.

AUTO SHUT DOWN

Select “AUTO SHUT DOWN” from the Main Menu to programme the device to automatically switch itself off if not in use.

ON
OFF
CANCEL

Press ◄ or ► key to setup AUTO SHUT DOWN. Select from “1-30” minutes and press “M” key to save setting and to exit.

BACKLIGHT

Select “BACKLIGHT” from the Main Menu to amend the brightness of the backlight.

BACKLIGHT 18

Press ◄ or ► key to setup backlight value. “1-21” are the effective levels, and press “M” key to save setting and to exit.

DELETE

Select “DELETE” from the Main Menu to delete pictures from the device.

DELETE ONE
DELETE ALL
CANCEL

Press ◄ or ► key to select picture to be deleted. Select “Yes” to delete, No to return to viewing images and Cancel to return to previous menu. Press “M” key to save setting and exit.

Please note that for all changes to take effect you must press “M” key within 5 seconds otherwise the device will not save the settings and the factory default settings will still remain.

OFF

Select “OFF” from the Main Menu to switch the device off.

EXIT

Select “EXIT” from the Main Menu to exit and return to viewing images.

For further information on the TEXET range, please refer to www.texet.com